


Audio Settings Win 11 Computers in Classrooms with Ceiling Mounted Projectors


In classrooms ***WITHOUT interactive short-throw projectors***, the audio is played on a speaker inside the computer cabinet. To pass the sound to this speaker, the computer audio settings must be correct.



To check or change the playback device on the computer, hover over the speaker icon located in the taskbar near the date and time. This is the same icon used to change the volume on the computer. The current playback device will be shown.

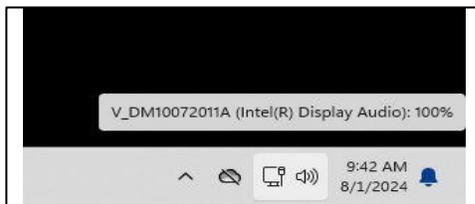


When the icon is clicked, the volume indicator appears. Click on the arrow to the right of the volume indicator to change the playback device if necessary.

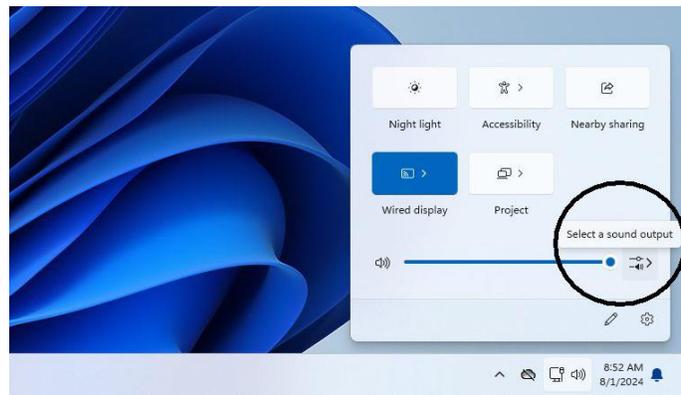

For rooms with ceiling mounted speakers (***those WITHOUT short-throw projectors***), the correct device is “Speakers (Realtek High Definition Audio).” This setting will pass the sound to the speaker inside the cabinet.

To change the playback device, simply click on the name currently displayed, and choose “Speakers (Realtek High Definition Audio).” Now the computer will pass the audio to the external speaker.

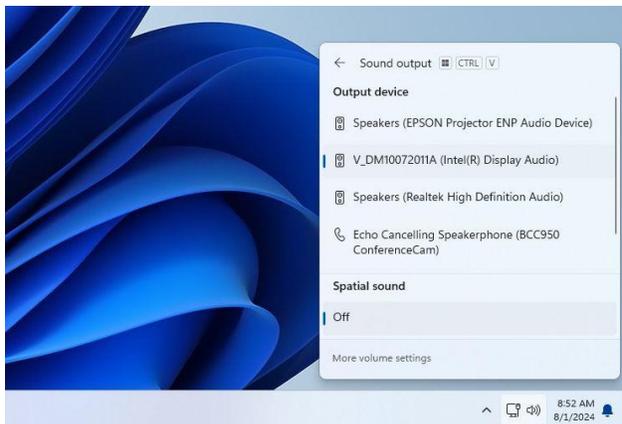

You must also check the external speaker inside the cabinet to make certain it is powered on, and turned up.

See Anchor Speaker for details.