

Audio Settings for Windows 11 Computers in Classrooms with Ceiling Speakers

In classrooms **WITH interactive short-throw projectors**, the audio is played through ceiling speakers. To pass the sound to the speakers, the computer audio settings must be correct.

 
First, make certain the computer volume is turned up. This adjustment is found by selecting the speaker icon on the taskbar, at the lower right of the computer, next to the time and date.

Next, use the data projector remote control, and raise the volume of the projector using the volume buttons.


If there is still no audio, it's possible the computer's playback device is set improperly.




To check or change the playback device on the computer, hover over the speaker icon with the mouse. The speaker icon is located on the taskbar near the date and time. This is the same icon used to change the volume on the computer. Hovering will reveal the playback device that is currently in use.

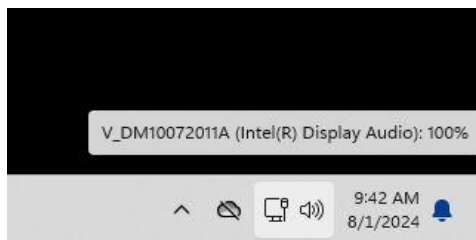

 When the icon is clicked, the volume indicator appears.

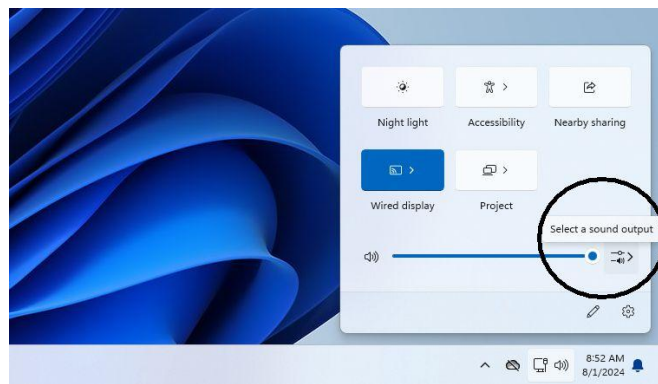

 To change the playback device, click the arrow to the right of the volume bar (circled) to see what playback device is selected. A list of devices will appear.

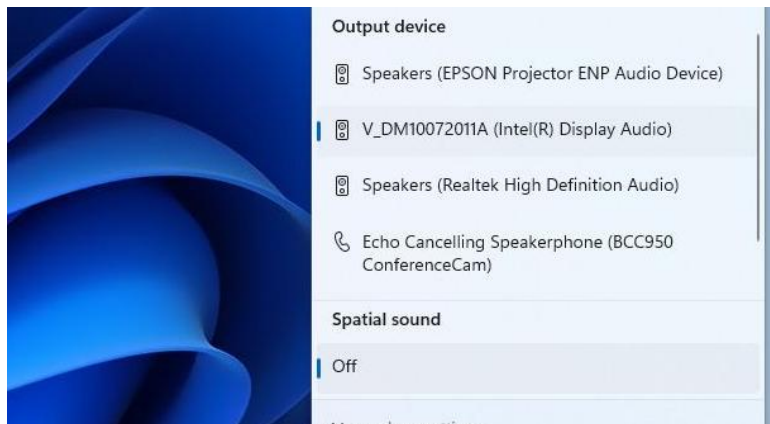

For rooms with short-throw, interactive projectors, the correct device is "V_DM10072011A." This setting will pass the sound through the HDMI to the projector, then to the speakers.

To change the playback device, simply click on the device named "V_DM10072011A." Now the computer will pass the audio through the HDMI to the speaker bar.

If this option is not shown, please reboot the computer, and the device should then be recognized and displayed as an audio option.