



Plug in the USB receiver for the wireless microphone. The system is already set up to pair with the microphone.





Turn on the power for the wireless microphone. Pressing the top button will turn the microphone on. Once it is on, pressing the up or down buttons will adjust the microphone gain.





You may also wish to connect wired microphones or a music source such as a smartphone. These connections are located on the rear of the speaker.





Volume for each input as well as the master volume are all handled through the knob on the rear of the speaker.

Turning the knob will adjust the volume for all inputs.

Using the buttons below the knob, you may select individual inputs, then adjust using the same knob. Follow the on-screen prompts to adjust the system.





Please make certain to turn off the speaker and wireless microphone when finished.

The main power switch is located on the rear of the speaker.

To turn off the microphone, press and hold the power button until the LED lights on the microphone turn off.

ELMO PORTABLE DOCUMENT CAMERA

POLSEN SHOTGUN MICROPHONE

Leave a Reply

