

External Speaker in Classrooms with Ceiling Mounted Projectors

For classrooms without short-throw, interactive projectors, the audio is played through an external speaker placed inside the computer cabinet. This speaker has volume adjustments on the front of it.



First, make certain the speaker is powered up. A small red light will be illuminated to the left of the volume knob if the speaker has power. If it does not, reach around the rear of the speaker – on the left side – and use the rocker switch to power up the speaker. You can do this just by feel – it’s the only switch on the rear of the speaker.

Adjust the volume to the desired level by turning the top knob.

Bass and treble may also be adjusted independently using the bottom two knobs.

The correct playback device on the computer must also be selected for the sound to pass through to the speaker.

See “Audio Settings for Computers in Classrooms with Ceiling Mounted Projectors” for instructions.