


## Pfeiffer Hall Room 25


### Audio

To play audio over the stereo speakers in Pfeiffer 25, the correct audio device must be selected on the computer. To check the audio source, click on the speaker icon on the taskbar.

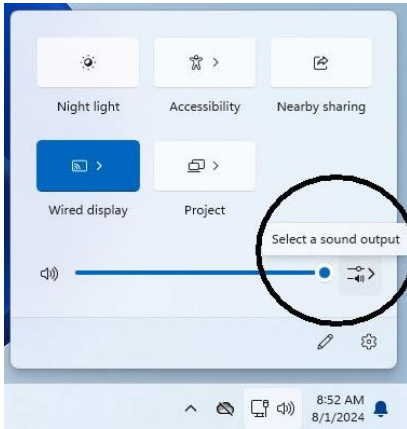

The volume indicator is displayed – here you can adjust the volume of the computer.

The correct playback device must be selected to direct the intended audio to the output. In PH 25, the correct playback device is V\_DM10072011A as shown in the image below.

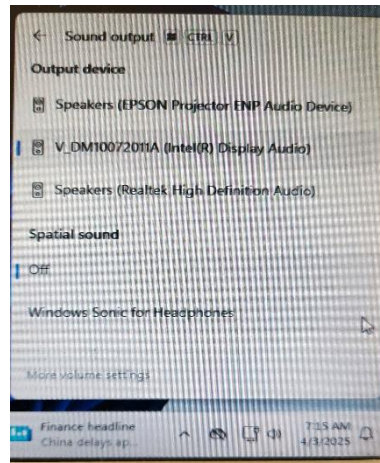

No other output device will direct the sound to the stereo speakers in the room.

If this device is not displayed in the output device window, the computer **must** be rebooted.

Once the correct playback device is selected, the audio is passed to the mixer located inside the computer cabinet. Make certain the power for the mixer is “ON”

The audio from the computer is adjusted by turning the “COMPUTER” knob in the “Stereo Inputs” area. Turn this knob up or down to adjust the volume of the computer audio. These inputs can be adjusted independently of each other to find the correct mix of audio if more than one source is being used.

The “MASTER” knob must be turned up when using any audio source. This knob increases or decreases the volume of ALL input sources equally so the mix between audio sources is not affected, only increased or decreased.



The two knobs on the Samson amplifier, at the very bottom of the rack, should not normally need to be adjusted.

However, the power for the amplifier should be on, and the knobs should be in the 11:00 position. Adjust only when not in this position.